



WaferBOND® HT-10.10

Temporary Bonding Material

WaferBOND® HT-10.10 temporary bonding material enables back-end-of-line (BEOL) processing of ultrathin wafers with standard semiconductor equipment.

WaferBOND® HT-10.10 material is an organic coating for temporary wafer bonding for MEMS and 3-D wafer-level packaging applications. WaferBOND® HT-10.10 material enables thinning and backside standard lithographic processing through effective bonding and subsequent thermal debonding. The material has been developed and tested especially for use in through-silicon via creation, finishing, and redistribution layer completion in processes up to 220°C.

BENEFITS

- Process ultrathin wafers using standard BEOL techniques and tooling
- Create interconnects before or after thinning
- Protect devices from chemical degradation
- Remove adhesive from device wafer completely

Resistance to Process Chemicals

Chemistry	Bath Temp.	Time
Acetone	25°C	25 min
NMP	85°C	60 min
6N HCl	60°C	30 min
15% H ₂ O ₂	60°C	40 min
30% NH ₄ OH	25°C	30 min
10% KI in H ₂ O	25°C	20 min
Ethanol	25°C	5 min
Methanol	25°C	5 min
Isopropanol	25°C	5 min
Cyclohexanone	25°C	5 min
Ethyl Lactate	25°C	5 min
PGMEA	25°C	5 min
PGME	25°C	5 min
30% HCl	25°C	90 min
70% HNO ₃	25°C	60 min
Note: An HMDS pretreatment is recommended for the following exposure recipes:		
0.26N TMAH	60°C	30 min
30% KOH	85°C	60 min

Contact Brewer Science for process recommendations for different coating thicknesses.

PROCESSING


Best known methods (200-mm wafers)

	20- μ m process	50- μ m process
Coat		
Spin speed	1200 rpm	450 rpm
Acceleration	3000 rpm/s	500 rpm/s
Time	30 s	35 s
Bake		
Bake 1	120°C, 3 min	120°C, 5 min
Bake 2	180°C, 4 min	180°C, 6 min
Bond		
Temperature	180°C	170°C
Force	3500 N	2100 N
Time	2 min	1 min
Vacuum	≤ 5 mbar	≤ 5 mbar


Storage Conditions

Store at room temperature (16 to 26°C)

WaferBOND® HT-10.10 Material Melt Rheology

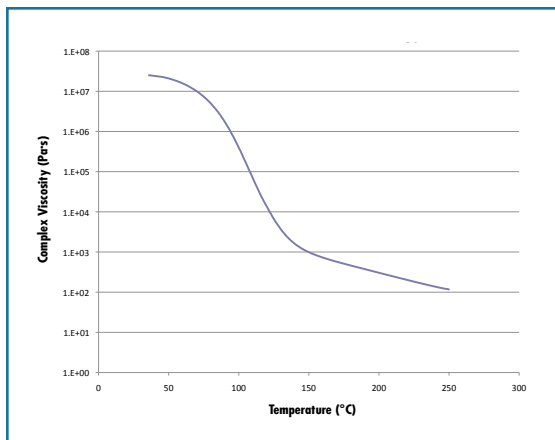

Spin Speed Curve

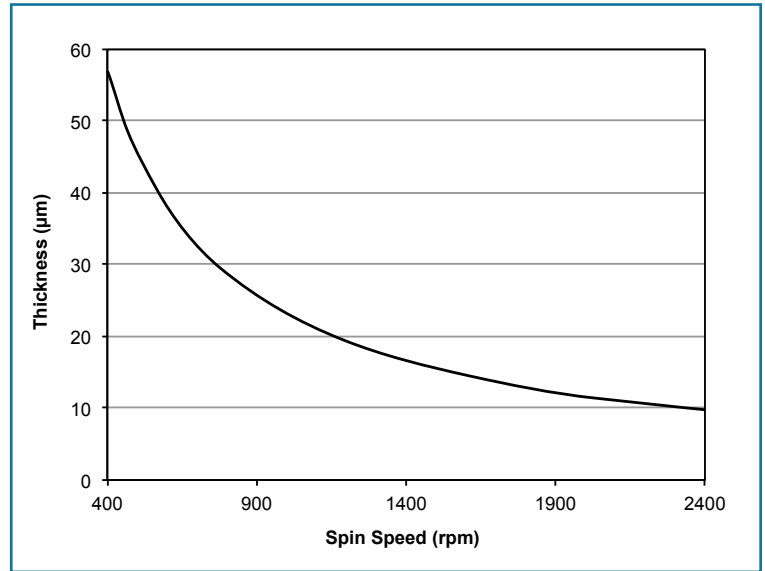

Thermal Slide Debonding

Temperature: 190°C

Max Rate: 3 mm/s

Max Force: 3 lb

Thin Wafer Cleaning Process

Clean – Central or Spray Dispense				
Step	Speed (rpm)	Acceleration (rmp/s)	Time (s)	Dispense
1	1000	3000	10	WBR
2	1000	3000	10	—
3	Repeat steps 1 & 2 five to thirteen times*			
4	1000	3000	2	IPA
5	1000	3000	5	—

*Dependent on thickness and equipment

WBR – WaferBOND® Remover material

IPA – Isopropyl alcohol

Viscosity (Brookfield) at 100°F (37.8°C)

WaferBOND® HT-10.10 material: 1020 cP

Viscosity (Brookfield) at Room Temperature (25°C)

WaferBOND® HT-10.10 material: 1840 cP

© 2017 Brewer Science, Inc.

All statements, technical information, and recommendations contained herein are based on tests we believe to be accurate, but the accuracy or completeness thereof is not guaranteed and the following is made in lieu of warranty expressed or implied. Neither the seller nor the manufacturer shall be liable for any injury, loss, or damage, direct or consequential, arising from the use or inability to use the product. Before using, user shall determine the suitability of the product for his intended use, and user assumes all risk and liability whatsoever in connection therewith. No statement or recommendation contained herein shall have any force or effect unless in an agreement signed by officers of the seller and manufacturer.

Effective Date: 5/01/2017